


Secure Mini-Cabinet Handle Replacement



Akro-Mils Secure Mini-Cabinets are provided with a locking swing handle. Follow these steps to replace this handle.

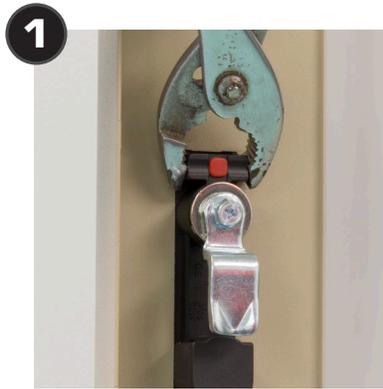

1 From inside the cabinet, use pliers or vice grips to pinch the snap wedges on both sides of the top. While holding both sides in, work the top of the lock assembly loose by rocking side to side and holding the handle on the front of the cabinet.



2 Once the top is disengaged, slide up to completely remove assembly.



3 To install new lock, slide bottom in first to align in the opening.



4 Firmly press top in place so wedge clips snap open to secure the lock.

