



A Complete System for N95 Respirator Decontamination Transport


The U.S Food and Drug Administration has authorized the Battelle Institute to decontaminate N95 respirator masks. Whether transporting internally or externally, the Akro-Mils KeepBox and Nest & Stack Totes are ideal solutions for the collection and shipment of N95 respirators for decontamination.

Choose from Akro-Mils KeepBox™ or Nest & Stack Totes today.


Follow these steps to prepare masks for shipment:

1. Bags containing the contaminated compatible N95 respirators to be decontaminated by Battelle (“primary collection bag”) should be closed.
2. Place the primary collection bag into another bag (“secondary collection bag”) (provided by the healthcare facility), which is then closed.
3. Decontaminate the secondary collection bag with alcohol or other suitable decontaminant.
4. Place the decontaminated bags into a rigid, closed box (Akro-Mils KeepBox™) clearly labeled with a biohazard symbol, and tape/zip tie the box securely shut.
5. Label the outside of the box with the 3-digit site code and 2-digit location identifier.
6. Ship to local Battelle Decontamination Site

KeepBox™ Totes

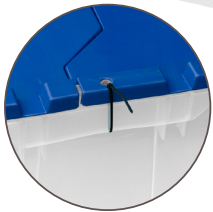

Attached Security Lid
Pre-drilled holes

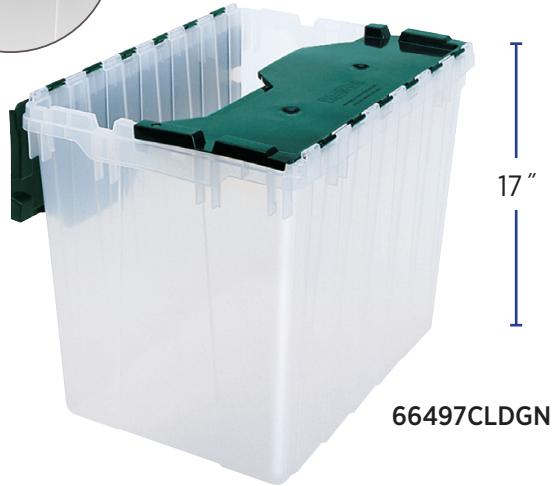

In-stock and available

KeepBox		Outside Dimensions (In.)			Inside Dimensions Top (In.)			Inside Dimensions Bottom (In.)		Capacity/Qty.				
Model No.	Description	L	W	H	L	W	H	L	W	Cu. Ft.	Gal.	Lbs.	Ctn. Qty.	Stack Cap./Qty. Stacked
66486CLDBL	Clear 12 gal. KeepBox - Blue Lid	21-1/2	15	12-1/2	19-3/4	14-1/2	12	17-7/8	12-3/4	1.6	12	25	6	5
66497CLDGN	Clear 18 gal. KeepBox - Green Lid	21-1/2	15	17	19-3/4	14-1/2	15-3/4	17-7/8	12-3/4	2.3	17	35	3	4

Nest & Stack Totes

Choose from
3 Colors
See below for
available sizes



Nest & Stack Tote
Pre-drilled holes



Security Lid
Pre-drilled holes

In-stock and available

Nest & Stack Totes (NSTs)	Outside Dimensions (In.)			Inside Dimensions (In.)					Capacity/Qty.				Accessories		
	Model No.	L	W	H	A	B	C	D	E	Cu. Ft.	Gal	Lbs.	Tote Ctn. Qty.	Stacking Height	Lid Model
35180	18	11	6	10	15	14-3/8	9-3/8	5-7/8	0.5	3.7	45	6	6	35181	6
35185	18	11	9	10	15	14-1/8	9-1/8	8-7/8	0.76	5.69	60	6	6	35181	6
35190	19-1/2	15-1/2	10	14-1/2	15-1/2	14-3/4	13-1/2	9-7/8	1.2	9	65	6	6	35191	6
35195	19-1/2	15-1/2	13	14-1/2	15-1/2	14-5/8	13-3/8	12-7/8	1.7	12.93	85	6	6	35191	6
35200	19-1/2	13-1/2	8	12-3/8	15-3/4	15-1/4	11-1/2	7-7/8	0.8	6.1	55	6	6	35201	6
35225	23-1/2	19-1/2	10	18-1/4	19-3/8	18	16-7/8	9-7/8	2	14.98	70	3	6	35231	3
35230	23-1/2	19-1/2	13	18-1/8	19-3/8	18	16-7/8	12-7/8	2.6	19.4	90	3	6	35231	3
35240	23-1/2	15-1/2	12	14-1/4	19-3/8	18-1/4	13	11-7/8	1.7	12.9	75	3	6	35241	3
35300	29-1/2	19-1/2	15	18-1/4	25	23-1/2	16-5/8	14-7/8	3.7	27.4	100	3	6	35301	3

One color per carton. Specify color: Red, Blue or Gray. Order in carton quantities.

Order everything you need for N95 Respirator Decontamination Transport.



Bag will vary based upon
facility preference

Primary Collection Bag

20 gallon

30" x 36"



Bag will vary based upon
facility preference

Secondary Collection Bag

20 gallon

30" x 36"



Rigid Closed Box

See

Information



Cable Tie for Security

40 lb.

5.6"

Decontamination requirements vary by facility. For additional information, contact us at the number below.



1293 South Main Street, Akron, Ohio 44301 • Tel: 800.253.2467 • inquiry@akro-mils.com

